

STEAMERY

Stockholm

CIRRUS NO.2 STEAMER
ENGLISH MANUAL

CIRRUS NO.2 STEAMER
ENGLISH MANUAL

WELCOME TO STEAMERY

Hi,

Let's make it even easier for you to take care of your clothes.

Developed by Scandinavian fashion professionals, engineers and industrial designers, with the aim to create the perfect portable steamer.

Meet Cirrus No.2 Travel Steamer. The matte rubber finish feels soft and silky in your hand and the performance is now even better. Easy to use, with better results and designed to fit into any trendy home or for use when traveling.

To learn more about Steamery, our products and garment care, visit our website www.steamerystockholm.com or drop us a line at info@steamerystockholm.com

/Steamery

SAFETY INSTRUCTIONS

When operating the steamer (and especially if children are present) safety precautions should always be taken, including the following:

READ THE FULL MANUAL BEFORE STARTING TO USE YOUR STEAMER

Danger - your steamer is always electrically live when it is plugged in. To reduce the risk of death or injury caused by electric shock always make sure to:

1. Unplug the steamer when it is not in use, when you refill the water tank or when cleaning the steamer.
2. Do not keep the steamer where there is any risk for it to fall into water.
3. Do not pull the power cord to remove the plug from the power outlet. Always pull from the plug.
4. Do not reach for an appliance that has fallen into water. Unplug immediately!
5. Use only in a dry area.

Warning - to reduce the risk of getting burned, fire, electrocution or other injury, always make sure to:

6. Do not point the steamer towards yourself or another person, animal, plant or similar. The steam is approximately 100°C (212°F) and may cause injury.
7. The steamer should not be used as a toy.
8. People younger than 18 years old should not operate the steamer.
9. Children should not clean or maintain the steamer.


10. Do not descale the steamer. Especially not with corrosive acid. The steamer may turn the acid into gases that are lethal to inhale.
11. Do not use the steamer if the power cord is damaged, if it is not working properly, if it has been dropped to the ground or damaged, or dropped into water. Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair.
12. Do not use this steamer in any other way than that described in the manual.
13. This appliance has a polarized plug (one blade is wider than the other). This is a safety feature; this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to disable this safety feature.
14. Do not use an extension cord to operate the appliance.
15. Do not operate the steamer without properly filling the water container with distilled water.
16. Burns could occur from touching hot parts, hot water, or steam. Make sure to always wear the included bag, which is made of heat resistant fabric, while steaming, so as not to get burned. Wear the heat protection glove/bag on the opposite hand of the one with which you are holding the steamer.
17. To reduce the risk of circuit overload, do not operate anything other than your steamer (a high-wattage appliance) on the same circuit.

18. Do not steam your own (yourself) or any other person's clothes while they are wearing them.

DO NOT THROW AWAY THIS MANUAL. SAVE IT AND KEEP IT TOGETHER WITH THE STEAMER.

CIRRUS NO.2 TRAVEL STEAMER BOX CONTENT

1. Cirrus No.2 Travel Steamer
2. Water Container
3. Travel Bag combined as a wearable ironing tool
4. Fabric Brush

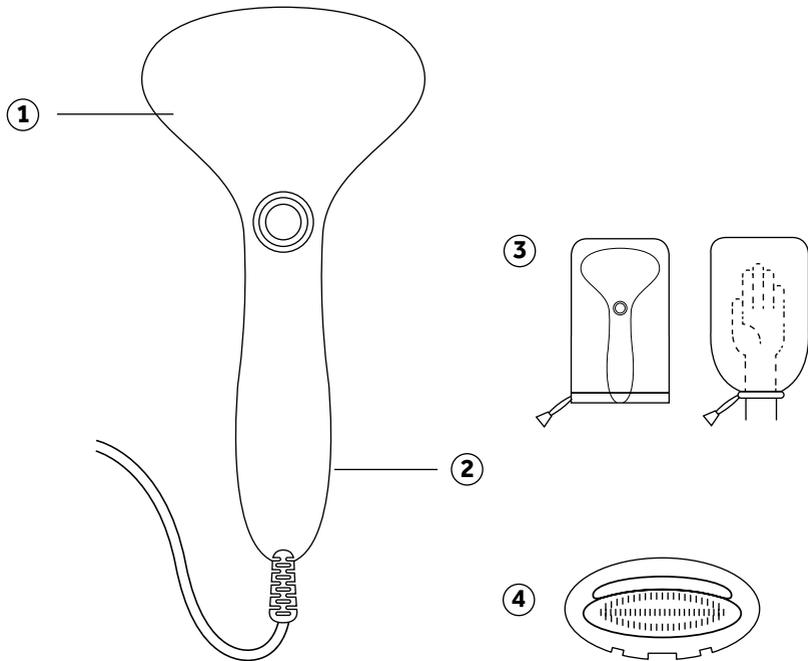


OPERATING INSTRUCTIONS

THIS DEVICE IS FOR HOUSEHOLD USE ONLY (for commercial use, Steamery recommends our commercial steamer model Stratus No.2 Professional Steamer.)

PREPARATIONS

1. Remove the water container by pulling it in the opposite direction from the nozzle and lift it out from the steamer. Take off the rubber plug on top of the water container and fill it with distilled water as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system. Close the water container with the rubber plug and put it back in position in the steamer.

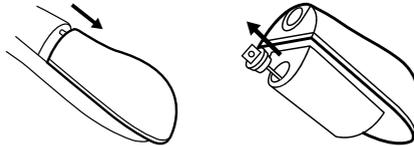


USING YOUR CIRRUS NO.2 STEAMER

1. Turn on the steamer by putting the plug into a power outlet and wait 20-25 seconds until red light turns off and the green light comes on. This indicates that the steam has reached the right temperature for use. Do not press the steam button before the green light comes on.
2. While steaming, if the red light comes on, please wait a few seconds without pressing the button. The steam needs to reach the right temperature again.
3. When using the device for the first time, test steaming first on an

old cloth as there may still be dry powder sediment left in the steamer from the manufacturing process.


4. Steam your preferred garment by hanging it on a hanger and move the nozzle over the fabric at the same time as you press the steam button to spray steam on to the garment. Point the steamer so the steam jets away from you. Do not use the steamer for more than 30 minutes continuously. If you wish to use your steamer for more than 30 minutes, let it cool off for one hour in between uses.

5. THE STEAM IS HOT! Make sure to always wear the included bag made of heat resistant fabric while steaming, so as not to get burned. Wear the heat protection glove/bag on the opposite hand of the one with which you hold the steamer.

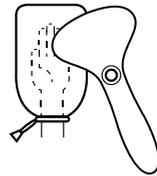

6. Always unplug the steamer from the power outlet when not in use. Do also empty the water container after use. Steamery does not take any responsibility for wet damaged surfaces, bags or other possessions.

7. For storage and traveling, your steamer comes with a travel and storage bag.

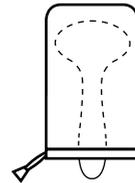

HOW TO STEAM YOUR GARMENTS

(And How To Use The Extra Tools)

Steaming your clothes is not difficult, but you will find your own way. Here are some tips:

1. Hang your garment properly on a separate hanger.
2. Move the steam over the fabric. It may take a few swipes for the creases to disappear completely.
3. Try steaming from the inside to reach hard to reach parts.

4. For sensitive fabrics such as silk and wool, we recommend that you attach the fabric brush onto the steam head (included in the package).
WARNING: Be extra careful when you attach the fabric brush, so as not to get burned. Always unplug the steamer and let it cool down before you attach the brush.
5. To keep the fabric straight, you may want to hold the fabric while steaming. Use the heat glove (included in package) to avoid burning yourself.
6. CAUTION: If hanging garments on a door while steaming, be careful not to damage the door with steam.

SPECIFICATION

Origin: People Republic of China

Certificates: TUV Rheinland

Model: Cirrus No.2 Travel Steamer / EM-601

Importer: The Steamery AB

Power voltage and Frequency: 110-120V, 60Hz

Power: 1300-1500W

Net Weight: 780 g

Gross weight: 1300 g

Start-up time: 20-25 seconds

THE STEAMERY ONE-YEAR LIMITED WARRANTY SUMMARY

Steamery warrants the included hardware product and accessories against defects in materials and workmanship for one year from the date of original retail purchase. Steamery does not warrant against normal wear and tear, lack of maintenance (i.e. nor damage caused by accident or abuse). To obtain service, please call or email Steamery.

Call charges and international shipping charges may apply depending on location. If you submit a valid claim under this warranty, Steamery will repair, replace, or refund your steamer at its own discretion. Warranty benefits are in addition to rights provided under local consumer laws. You may be required to furnish proof of purchase details when making a claim under this warranty.

STEAMERY.SE

